

Instruction For Water Blower

A22-2300/TA22-2300/VA22-2300


About

A22-2300/TA22-2300/VA22-2300 is second-generation double motors blaster with wind speed adjustable. With improved structure design it has feature of high-power ($\leq 2800W$), wind speed adjustable, heating function and unique nozzle connector, etc. It has lower noise and stronger wind speed compare with first generation. It is a must for pets' hair drying and grooming.

1. Out-let
2. Air put-let
3. The flexible tube
4. Power switch
5. Wind speed switch
6. Heating switch
7. The fixing screw
8. The air intake net cover



Operation of the Water Blower

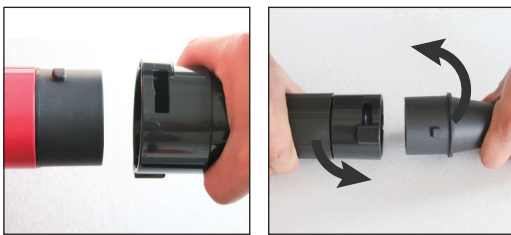

- a. Install the hose of the blower on the dryer, and clamp the hose tightly by rotating the connector.
- b. Rotate the house in the direction indicated by the arrow to install the hose

1. As showed in the picture, loose the clasp(4), insert the flexible tube into the first air put-let, tight the clasp. According to your need, choose the suitable hose coupler(as showed in the picture).
2. According to the assigned voltage, choose the proper one, (220V), or the blower might be damaged by the wrong voltage.
3. Turn on the power switch(5), in according with the requirement, choose the suitable air volume and temprature.
4. Clean the air intake net leaf regularly. Remove the fixing screw and air intake net cover, and then you can do the cleaning and change, which can prevent the air intake from being blocked and thus can protect the motor.
5. If the motor does not work, please check whether the power supply has been connected. If the connection and contact are good but the product still can not work properly, send it to some professional men for fix. Please do not disassemble the product arbitrarily.

Tips: Do not take it into the bathroom.

Safety Instructions

- 1: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- 3: Children should be supervised to ensure that they do not play with the appliance.
- 4: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - when the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off;
 - for additional protection, the installation of a residual current device(RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



Do not use this device in a bathtub, shower, or water-filled reservoir

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Warnings

1. This dryer is only intended for the use of drying dogs.
2. Product must not be used by anyone under the age of 18. The product must only be used by a trained professional.
3. This appliance is not intended for use (including maintenance such as cleaning) by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
4. Do not submerge in water. Do not get wet under any circumstances.
5. Do not use heat setting if air in the room is above 15°
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Check item condition before every use. If the product is damaged in any way do not use. Ensure all parts are still correctly fitted before every use.
8. Please remove hair/fur on filter sponge before the power is on every time.
9. When the appliance is operated, a trained person must watch over the pets to avoid injury to the pets or injury to the user. We are not responsible for any acts that lead to injury to the pets or user or by any misuse of this product.
10. Disconnect the appliance from its power source during service and maintenance of any kind.
11. The removal of the plug has to be such that an operator can check from any of the points to which they have access that the plug remains removed.
12. This appliance is designed to be used in commercial areas.
13. The appliance must have a separate power supply line. Do not use electricity with other high-powered equipment.
14. Do not insert any metal objects into the gaps of the appliance, nor allow any liquid to drip into it. Otherwise, it may cause electric shock, personal injury or short-circuit of the appliance which we are not responsible for.
15. Do not cover, wrap, block the air outlet and air inlet to avoid damage to the appliance or overheating. Ensure the room has suitable air flow to prevent overheating. Discontinue use if the product begins overheating.
16. Install a Residual Current Device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the product. Ask your installer for advice.
17. If there is a malfunction during the use of the appliance, please disconnect the power of the host in time and send it directly to Groomers World's designated aftersales service centre for professional maintenance. DO NOT disassemble the appliance by yourself. Otherwise, GW Equipment Ltd and our distributors are NOT responsible for any losses caused by this.
18. Please install and use the corresponding stand or wall-mount bracket in strict accordance with this manual.
19. Ensure hose is correctly attached before use.
20. Please check item before every use. If the item has any damage, do not use until repaired by an approved technician.

• Warranty Exclusions

This warranty does not cover failures or damages resulting from misuse, accidents, modifications, unsuitable physical or operating environments, acts of nature, transportation damages, or improper maintenance.

• Limitation of Liability

Under no circumstances is the supplier liable for third party claims against you for damages, special, incidental, or indirect damages, or for any economic consequential damages, or lost profits, business revenue, goodwill or anticipated savings. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.