


Instruction For Water Blower S2-2400/VS2-2400/TS2-2400

S2-2400, VS2-2400, TS2-2400 water blowers have adopted rigid plastic shell and cascade alternating current motor, which can ensure the long life-span as well as the cute appearance of the products. The wind volume is adjustable and the serial products have the heating device. With the help of the arm set, the products can reduce the workload of the beauticians. The power is $\leq 2200\text{W}$; the wind speed is $\leq 48\text{m/s}$; the heating temperature is ≤ 55 degrees centigrade.

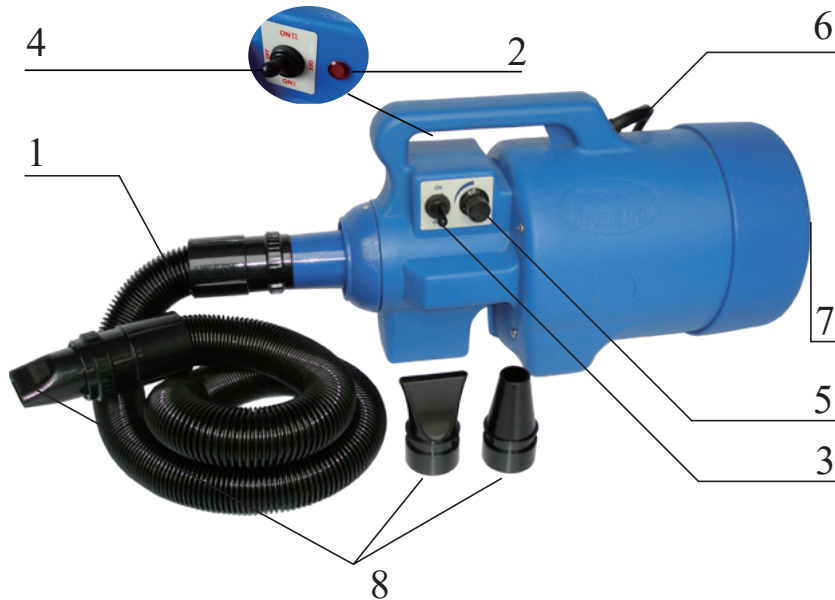

1. The flexible tube
2. The pilot light
3. The power supply switch
4. The heating controlling switch
5. The speed controlling switch
6. The electric wire
7. The filter net
8. The air out-let

Tips: 1) Pay attention to the assigned voltage

2) Do not take it into the bathroom

Operation of the Water Blower:

1. Install the flexible hose. Loose the C-clip and connect the hose as per the photo attached.
2. Connect the product to the suitable voltage power supply.
3. Turn on the power, and turn on the wind speed.
4. Regarding the environment temperature, to choose heating or not heating the wind.
5. The wind speed can be adjusted.
6. The temperature is ≤ 55 degrees.

Note:

1. Set the hose coupler(or straight tube). The blowers of vertical type or with boom brace will be introduced in the following page. Install the vertical stand or the boom brace, and make sure it's firm.
2. Connect the product to the electric power supply according to the specific voltage type(230V or 110V). Turn on the power supply switch(3), and the pilot light(2) will be lit, if not, please confirm whether the product has been connected to the power supply. If the motor does not work, please send the product to some professional staff for fix.
3. According to the working requirement, adjust the air volume speed controlling knob(5). The switch(4) is to control the our-let air heat; you may choose to speed up the wind current or not.
4. Change the filter net after a period of using, to ensure the in-pup air volume as well as to product the motor.
5. If anything goes wrong with the product, send it to some professional men for fix. Please do not disassemble the product arbitrarily.

Safety Instructions

- 1: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- 3: Children should be supervised to ensure that they do not play with the appliance.
- 4: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - when the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off;
 - for additional protection, the installation of a residual current device(RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



Do not use this device in a bathtub, shower, or water-filled reservoir


WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



UK
CA

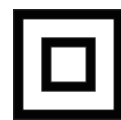

GW Equipment Ltd., Unit 11 Sunflag Business Park, DH1 1TN Durham
info@groomersworld.co.uk

Warnings

1. This dryer is only intended for the use of drying dogs.
2. Product must not be used by anyone under the age of 18. The product must only be used by a trained professional.
3. This appliance is not intended for use (including maintenance such as cleaning) by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
4. Do not submerge in water. Do not get wet under any circumstances.
5. Do not use heat setting if air in the room is above 15°
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Check item condition before every use. If the product is damaged in any way do not use. Ensure all parts are still correctly fitted before every use.
8. Please remove hair/fur on filter sponge before the power is on every time.
9. When the appliance is operated, a trained person must watch over the pets to avoid injury to the pets or injury to the user. We are not responsible for any acts that lead to injury to the pets or user or by any misuse of this product.
10. Disconnect the appliance from its power source during service and maintenance of any kind.
11. The removal of the plug has to be such that an operator can check from any of the points to which they have access that the plug remains removed.
12. This appliance is designed to be used in commercial areas.
13. The appliance must have a separate power supply line. Do not use electricity with other high-powered equipment.
14. Do not insert any metal objects into the gaps of the appliance, nor allow any liquid to drip into it. Otherwise, it may cause electric shock, personal injury or short-circuit of the appliance which we are not responsible for.
15. Do not cover, wrap, block the air outlet and air inlet to avoid damage to the appliance or overheating. Ensure the room has suitable air flow to prevent overheating. Discontinue use if the product begins overheating.
16. Install a Residual Current Device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the product. Ask your installer for advice.
17. If there is a malfunction during the use of the appliance, please disconnect the power of the host in time and send it directly to Groomers World's designated aftersales service centre for professional maintenance. DO NOT disassemble the appliance by yourself. Otherwise, GW Equipment Ltd and our distributors are NOT responsible for any losses caused by this.
18. Please install and use the corresponding stand or wall-mount bracket in strict accordance with this manual.
19. Ensure hose is correctly attached before use.
20. Please check item before every use. If the item has any damage, do not use until repaired by an approved technician.

• Warranty Exclusions

This warranty does not cover failures or damages resulting from misuse, accidents, modifications, unsuitable physical or operating environments, acts of nature, transportation damages, or improper maintenance.

• Limitation of Liability

Under no circumstances is the supplier liable for third party claims against you for damages, special, incidental, or indirect damages, or for any economic consequential damages, or lost profits, business revenue, goodwill or anticipated savings. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.