



LARGE EXTRA LOW ELECTRIC PET GROOMING TABLE

USER MANUAL


GWFT-808




PROFESSIONAL GROOMING EQUIPMENT
www.groomersworld.co.uk

PARTS & ACCESSORIES DIAGRAM


1 Non-slip Table Top × 1

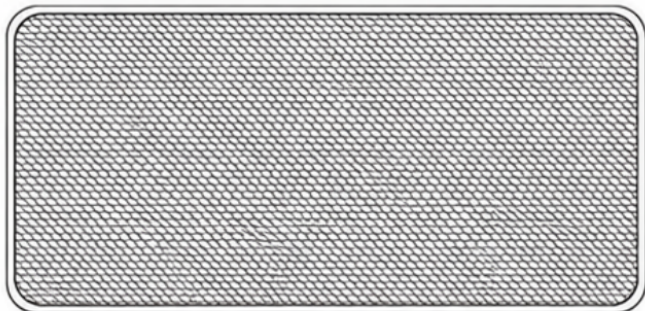

2 Grooming Table Frame × 1

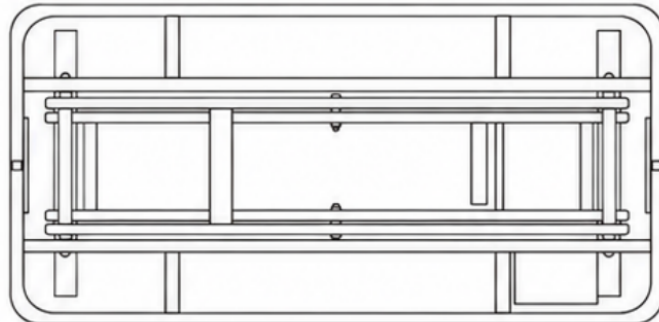

3 Over-head Grooming Arm Set × 1

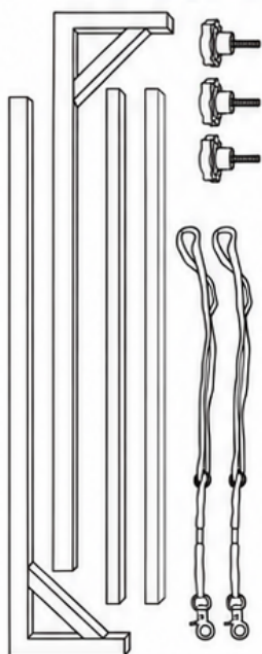


4 M10 × 25 Handle Screws × 2



5 Foot Pedal



6 Adjustable Feet × 4

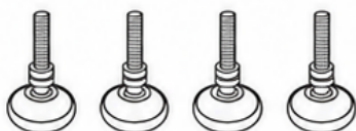

7 Linear Actuator 220




8 Transformer



OVERHEAD GROOMING ARM ASSEMBLY


1 Adjust the Width

Loosen the adjustment screws by turning them anticlockwise. Extend the grooming arm to the required width to fit the table, then tighten the top adjustment screw to secure it in position.

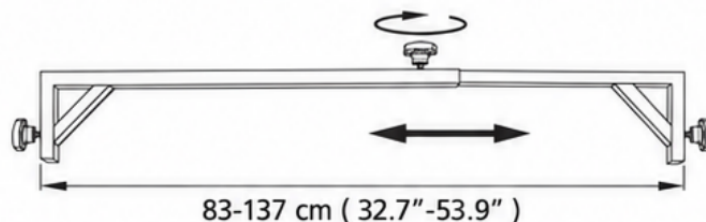


2 Adjust the Height

Loosen the adjustment screws on both sides of the grooming arm by turning them anticlockwise. Insert the upper arm sections into the upright supports, ensuring both sides are set to the same height. Once positioned, tighten the adjustment screws on both sides securely.

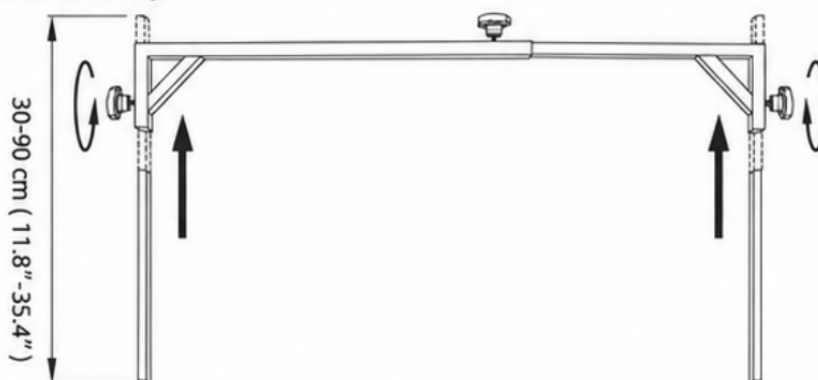

3 Secure the Grooming Arm to the Table

Insert both upright supports into the mounting holes on either side of the tabletop, allowing approximately 4-6 cm of each support to extend below the mounting point. Secure the grooming arm using the two supplied M10 x 25 handle screws, ensuring both sides are firmly tightened.

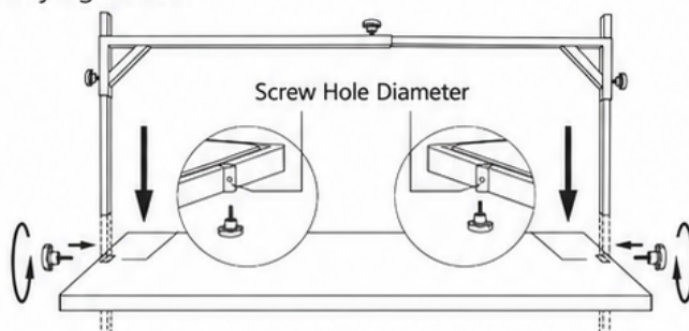


IMPORTANT

Ensure all adjustment screws are securely tightened and the grooming arm is stable before attaching grooming loops or placing a dog on the table.

FINAL ASSEMBLY INSTRUCTIONS


4 Attach the Grooming Loops

Attach the two supplied grooming loops to the designated attachment points on the overhead grooming arm, ensuring both clips are securely fastened before use.

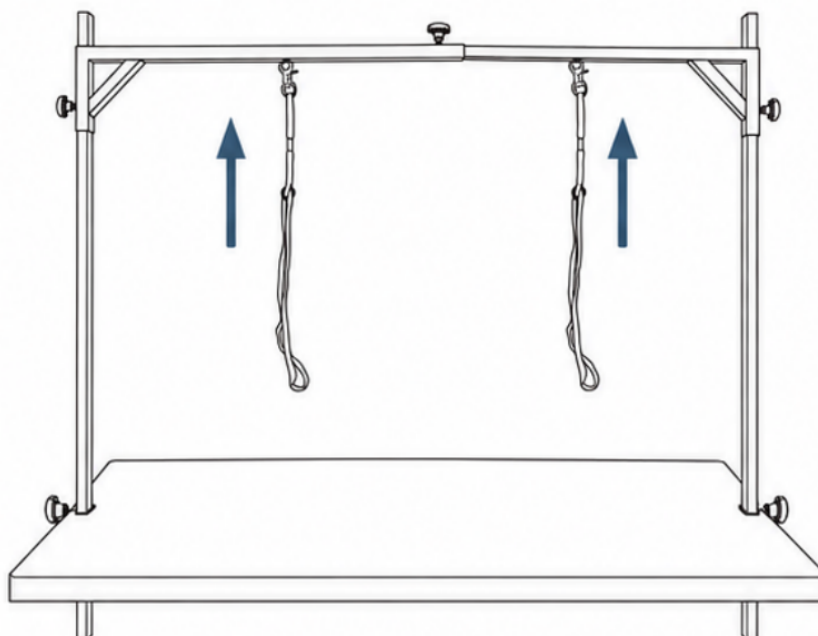

5 Install the Adjustable Feet


Screw the four supplied adjustable feet into the designated mounting points underneath the table base. Adjust each foot as required to ensure the table is level and stable on the floor.

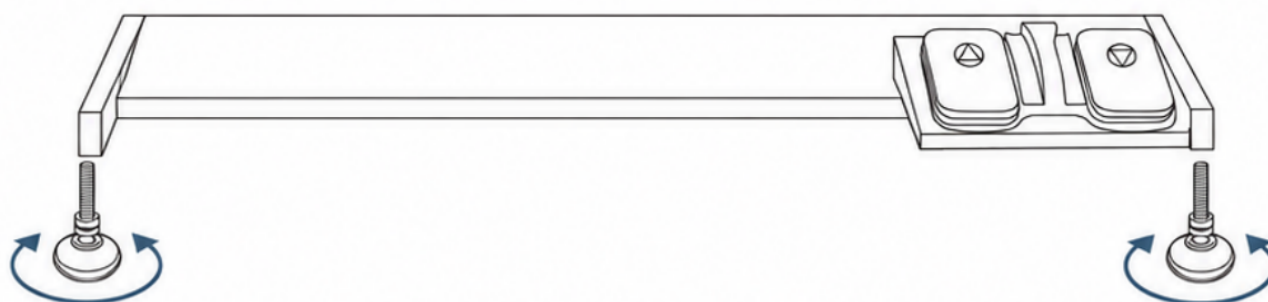


IMPORTANT – BEFORE USE

Ensure the grooming table is positioned on a firm, level surface and that all adjustable feet are securely fitted. Check that the grooming arm and loops are properly secured before placing a dog on the table. Never leave a dog unattended while secured to the grooming arm.

DIMENSIONS & SPECIFICATIONS

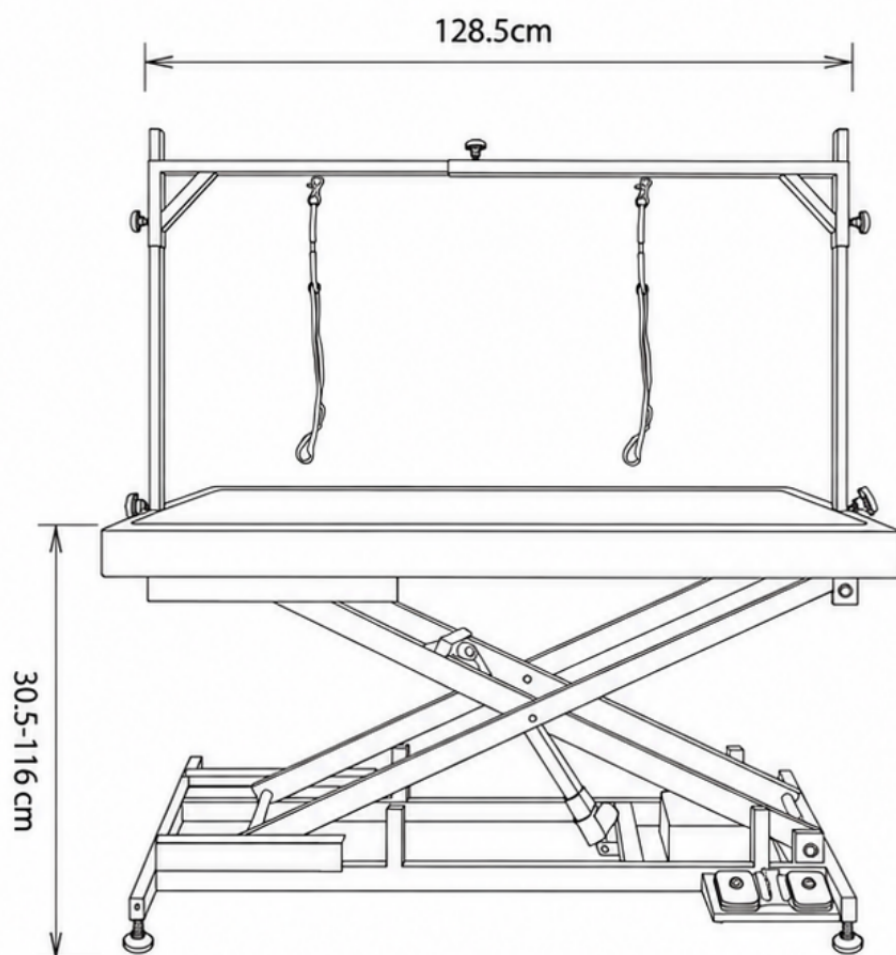

Front View

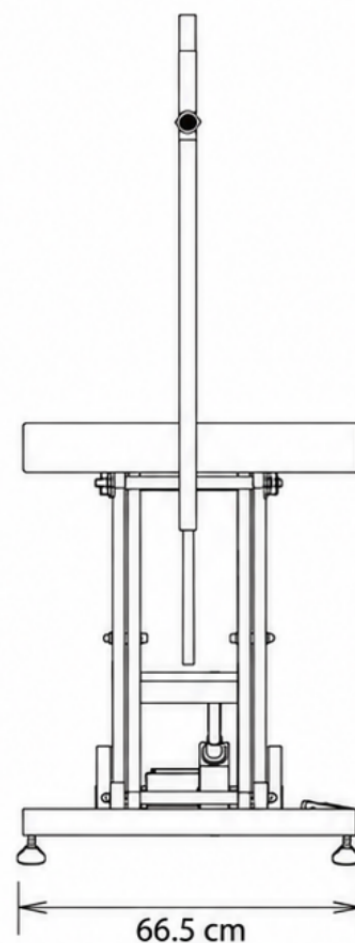

Side View

Model: GWFT-808

Net weight(kg)	53.5	Gross Weight(kg)	59.5
Voltage	110-240V	CBM	0.251
Product dimensions (cm)	128.5×66.5×29.5-102	Package dimensions (cm)	131.5×69.5×27.5H

GWFT-808


OPERATING INSTRUCTIONS

1 ALCI Safety Protection


Maximum rated load: 3000W

Protection rating: IPX66

Press down
the button to
disconnect
the power.

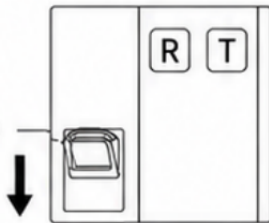

Press up the
button to
connect
the power.

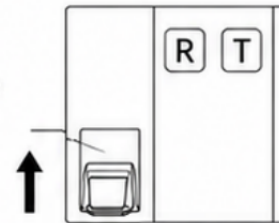

R

Reset: Press the reset button to restore power after testing.

T


Test: Press the test button once per month to check that the safety protection operates correctly.





IMPORTANT: If the ALCI fails to disconnect power when tested, discontinue use until the issue has been assessed.

2 Adjusting the Table Feet

Rotate the adjustable feet as required to ensure the grooming table is level and stable on the floor. All four feet should make firm contact with the ground before use.

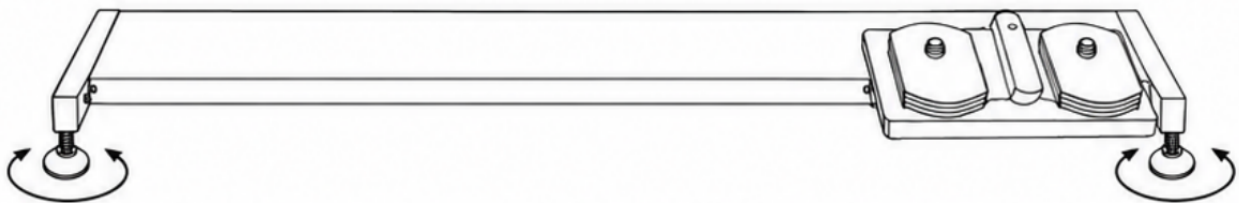

3 Foot Pedal Operation

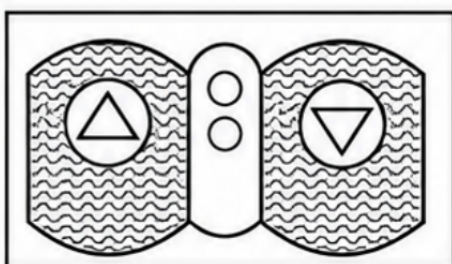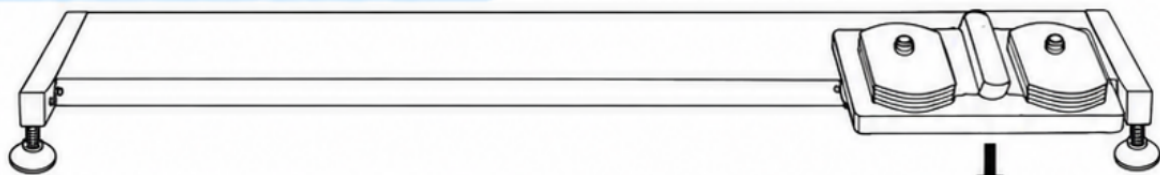

Raise the Table

Stepping on the pedal to lift up.



Lower the Table

Stepping on the pedal to go down.

SAFETY & OPERATING INSTRUCTIONS

ELECTRIC GROOMING TABLE – MODEL GWFT-808



Please read and follow these instructions carefully before using this product.

Keep this manual for future reference. Failure to follow these instructions can lead to serious injury or death, damage to the equipment or invalidate the warranty.

1 GENERAL SAFETY & OPERATION

- This appliance is intended solely for professional dog grooming. It must not be used for lifting people or for any other purpose.
- This appliance may only be operated by trained professionals aged 18 years or over. Children must not operate or play with the equipment.
- Do not exceed the maximum load capacity of 115 kg. Ensure the dog is positioned centrally at all times.
- Do not exceed a maximum load of 40 lbs (18 kg) when using the H-bar hooks to support a grooming hammock or similar restraint.
- Only one dog may be placed on the table at a time.
- Before loading, switch on the power supply and lower the table to a suitable height for safe loading. Carefully place the dog onto the table, ensure it is securely positioned and, where appropriate, restrained, before adjusting to the required working height.
- Ensure the dog remains centrally positioned on the table during operation.
- Once grooming is complete, lower the table to a safe height for removal. Carefully remove the dog from the table and switch off the power supply once the desired height is reached.
- Avoid unnecessary or continuous operation of the lifting mechanism.
- Ensure the dog is kept clear of the lifting mechanism and other moving components at all times. Do not allow dogs to be beneath or near the lifting mechanism during operation.
- Ensure the unit is installed on a stable, level surface and that all components are correctly assembled prior to use.
- Ensure all electrical connections are protected by an IP66-rated socket and a suitable waterproof cover when operating.
- Keep electrical components, including plugs, sockets, controls and cables, protected from water ingress at all times. Do not allow water to come into contact with these parts.
- Do not connect the appliance to an overloaded circuit or shared outlet where this may present a risk.
- Do not allow any person to sit, stand, climb or lean on the table.
- Inspect all structural components, including welding points on the lifting frame, before each use to ensure there are no signs of damage, cracking or fatigue; do not operate the appliance if any defects are identified.
- Inspect painted surfaces regularly, and any damaged or chipped paintwork must be restored immediately to prevent corrosion.
- Always ensure the surrounding area and floor are clean, dry, well-lit and free from obstacles before use to reduce the risk of slips, trips or electrical hazards.
- Keep hands, feet and other body parts clear of moving parts, as this may result in crushing or pinching injuries and could result in serious injury or death.
- Never leave a dog unattended on the table and maintain supervision at all times during operation.
- Do not use the equipment if the power cable, plug, transformer, actuator or foot pedal is damaged.
- Ensure all cables are positioned safely to prevent damage, strain, tripping hazards or access by dogs.
- Do not tamper with, interfere with, or attempt to access internal electrical components. Do not insert, poke or prod objects into any openings, controls or electrical parts of the appliance.
- Do not operate the lifting mechanism continuously for more than 2 minutes. Allow a minimum rest period of 18 minutes between cycles to prevent overheating.
- Always use appropriate restraints where necessary to ensure the safety of the dog.

2 CLEANING, MAINTENANCE & FAULTS

- Disconnect the appliance from the power supply when not in use and at the end of each working day.
- Disconnect from the power supply before cleaning, inspection or maintenance.
- Clean using a dry or slightly damp cloth only. Do not use corrosive, abrasive or solvent-based cleaning agents.
- Do not use water to clean electrical components, including the controller, foot pedal or actuator, due to risk of electric shock.
- Regularly inspect the appliance to ensure it remains in safe working condition. All repairs must be approved by Groomers World.
- In the event of abnormal operation, stop use immediately, isolate the appliance from the power supply and do not attempt to repair or disassemble the unit. Contact info@groomersworld.co.uk for further assistance.
- Do not modify the equipment in any way. Use only Groomers World approved parts and accessories.
- Ensure all safety labels remain present, clean and clearly legible at all times; if not, contact us at info@groomersworld.co.uk.
- The expected service life of this appliance is 3 years under normal use and maintenance.

3 WARRANTY EXCLUSIONS

This warranty does not cover faults or damage caused by misuse, neglect, accidental damage, failure to follow instructions, unauthorised repairs or modifications, normal wear and tear, unsuitable operating conditions, improper maintenance, transportation damage after delivery, or use of non-approved parts or accessories. This warranty does not affect your statutory rights under UK consumer law.

4 LIMITATION OF LIABILITY

To the fullest extent permitted by law, the supplier shall not be liable for any indirect or consequential loss, including loss of profits, revenue, goodwill, or third-party claims. Nothing in this warranty excludes or limits liability for death or personal injury caused by negligence, fraud or fraudulent misrepresentation, or any liability that cannot be excluded under UK law.



PRODUCT INFORMATION & COMPLIANCE

GW Equipment Ltd

Electric Grooming Table – GWFT-808

Name	Pet Grooming Table	Weight GW/NW	59.5/53.5 kg
Model	GWFT-808	Input	230V~50Hz
Size	128.5*66.5*29.5-102H cm	Max Power	50W
Lifting Height	30–102 cm	Output	24V =, Max 2.0A
Static Load	115 kg	Manuf No	
Lifting Weight	120 kg	Manuf Date	



WARNING

Read and fully understand operator's manual before using this machine.
Failure to follow operating instructions could result in death or serious injury.



MADE IN CHINA

GW Equipment Ltd, Unit 11 Sunflag Business Park, Durham, DH1 1TN
Tel: 07511785417 Email: info@groomersworld.co.uk



PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

The product identification label contains important model, rating and manufacturer information and must remain attached and legible.

For product support, servicing, replacement parts or safety enquiries,
please contact Groomers World.

GW Equipment Ltd

Unit 11 Sunflag Business Park
Durham, DH1 1TN, United Kingdom



info@groomersworld.co.uk



www.groomersworld.co.uk